

STF Models

Specifications

Model	Torque		Misalignment			Max. rotation speed [min ⁻¹]	Torsional stiffness [N-m/rad]	Moment of inertia [kg-m ²]	Mass [kg]
	Nominal [N-m]	Max. [N-m]	Parallel [mm]	Angular [°]	Axial [mm]				
STF-013SA1	0.5	1	0.15	1.5	± 0.2	10000	15	0.11 × 10 ⁻⁶	0.004
STF-016SA1	1	2	0.15	1.5	± 0.2	10000	27	0.31 × 10 ⁻⁶	0.009
STF-019SA1	1.5	3	0.15	1.5	± 0.2	10000	38	0.70 × 10 ⁻⁶	0.013
STF-024SA1	2.5	5	0.15	1.5	± 0.2	10000	127	1.89 × 10 ⁻⁶	0.023
STF-029SA1	4	8	0.2	1.5	± 0.3	10000	201	4.40 × 10 ⁻⁶	0.034
STF-034SA1	6	12	0.2	1.5	± 0.3	10000	371	9.77 × 10 ⁻⁶	0.056
STF-039SA1	8.5	17	0.2	1.5	± 0.3	10000	485	21.13 × 10 ⁻⁶	0.091
STF-044SA1	15	30	0.2	1.5	± 0.3	10000	996	37.30 × 10 ⁻⁶	0.120
STF-056SA1	30	60	0.2	1.5	± 0.3	10000	2075	125.5 × 10 ⁻⁶	0.251


* Check the Max. Torque for the Shaft Diameter list as there may be limitations on the standard and maximum torque caused by the holding power of the coupling shaft section.

* The max. rotation speed values do not take into account dynamic balance.

* The static torsional stiffness values are analysis values for the element taken at a temperature of 20° C at maximum bore diameter.

* The moment of inertia and mass are measured for the maximum bore diameter.

Dimensions

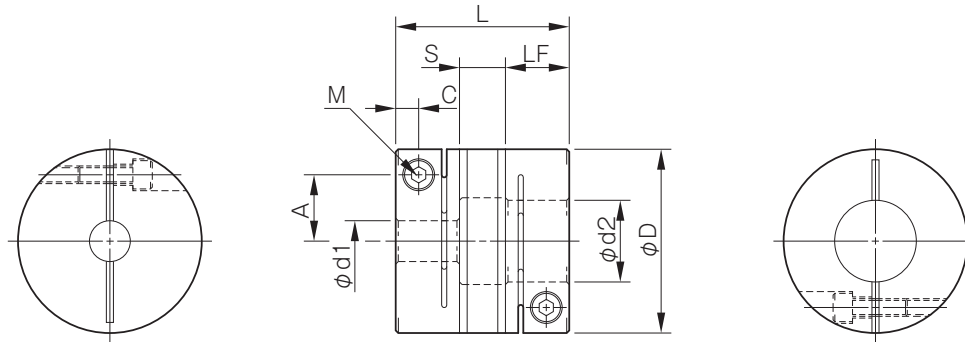

Model	d1 · d2 [mm]		D [mm]	L [mm]	LF [mm]	S [mm]	A [mm]	C [mm]	M Qty-Nominal diameter	Tightening torque [N-m]
	Min.	Max.								
STF-013SA1	3	5	13	18	6	6	3.9	2	1-M1.6	0.23 ~ 0.28
STF-016SA1	3	6	16	22	7.5	7	4.8	2.5	1-M2	0.4 ~ 0.5
STF-019SA1	3	8	19	25	9	7	5.8 (6)	3.15	1-M2.5 (M2)	1.0 ~ 1.1 (0.4 ~ 0.5)
STF-024SA1	5	10	24	27	9	9	8.7	3.15	1-M2.5	1.0 ~ 1.1
STF-029SA1	5	14	29	30	10	10	11	3.3	1-M2.5	1.0 ~ 1.1
STF-034SA1	5	16	34	34	12	10	12.5	3.75	1-M3	1.5 ~ 1.9
STF-039SA1	6	19	39	41	15.5	10	14	4.5	1-M4	3.4 ~ 4.1
STF-044SA1	8	24	44	48	15.5	17	17	4.5	1-M4	3.4 ~ 4.1
STF-056SA1	8	30	56	60	20.5	19	22	6	1-M5	7.0 ~ 8.5

* The nominal diameter for the clamping bolt M is equal to the quantity minus the nominal diameter of the screw threads, where the quantity is for a hub on one side.

* The figures in parentheses () for the STF-019 are the values when d1 or d2 is ø8 mm.

* The escape in the internal diameter of the element is equal to dimension d2 (large diameter) plus ø0.9 mm.

* The rated dimension tolerance for countershafts is h7 class.

Standard Bore Diameter

Model	Standard bore diameter d1 · d2 [mm]																								
	3	4	5	6	6.35	7	8	9	9.525	10	11	12	13	14	15	16	17	18	19	20	22	24	25	28	30
STF-013SA1	●	●	●																						
STF-016SA1	●	●	●	●																					
STF-019SA1	●	●	●	●	●	●	●	●																	
STF-024SA1			●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
STF-029SA1			●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
STF-034SA1			●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
STF-039SA1				●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
STF-044SA1						●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
STF-056SA1							●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

* The bore diameters marked with ● are supported as standard bore diameter.

* Depending on the bore diameter used, restrictions may apply to the standard and maximum torque as determined by the holding force in the shaft coupling. Check "Max. Torque for the Shaft Diameter".

COUPLINGS

ETP BUSHINGS

ELECTROMAGNETIC CLUTCHES & BRAKES

SPEED CHANGERS & REDUCERS

INVERTERS

LINEAR SHAFT DRIVES

TORQUE LIMITERS

ROSTA

Max. Torque for the Shaft Diameter


Model	Standard bore diameter [mm] and max. torque for the shaft diameter [N · m]																											
	3	4	5	6	6.35	7	8	9	9.525	10	11	12	13	14	15	16	17	18	19	20	22	24	25	28	30			
STF-013SA1	0.10	0.25	0.40																									
STF-016SA1	0.5	0.6	0.7	0.8																								
STF-019SA1	0.8	1.2	1.6	1.9	1.9	2.3	0.8																					
STF-024SA1			1.6	2.1	2.1	2.6	3.3	4.0	4.0	4.7																		
STF-029SA1			1.8	2.2	2.2	2.7	3.4	4.1	4.1	4.8	5.5	6.3	7.8	8.0														
STF-034SA1			2.7	3.0	3.0	3.3	4.0	4.8	4.8	5.6	6.5	7.8	9.0	10.7	12.0	12.0												
STF-039SA1				3.4	3.4	4.0	5.0	6.1	6.1	7.1	8.2	9.3	10.4	11.5	12.8	14.0	15.3	16.6	17.0									
STF-044SA1								6.0	8.3	8.3	9.8	11.3	12.8	14.3	16.0	17.3	18.8	20.3	21.8	23.5	24.8	27.8	30.0					
STF-056SA1									10.7	11.9	11.9	13.4	14.9	16.3	17.8	18.7	20.8	22.2	23.7	25.2	27.0	32.0	41.9	52.0	56.3	60.0	60.0	

* Check the above list as there may be limitations on the standard and maximum torque caused by the holding power of the coupling shaft section.
 * Maximum torque with a limitation becomes the small diameter (d1) torque value. However, note that only in the instance that d1 or d2 for STF-019SA1 is ø8 mm, there is a decrease in the size of the clamping bolt, and the limit is 0.8 N·m.

STF-019SA1 standard bore diameter and max. torque

d1-d2	Max. torque [N · m]	d1-d2	Max. torque [N · m]	d1-d2	Max. torque [N · m]	d1-d2	Max. torque [N · m]	d1-d2	Max. torque [N · m]	d1-d2	Max. torque [N · m]	d1-d2	Max. torque [N · m]
3B-3B	0.8	3B-4B	0.8	3B-5B	0.8	3B-6B	0.8	3B-6.35B	0.8	3B-7B	0.8	3B-8B	0.8
		4B-4B	1.2	4B-5B	1.2	4B-6B	1.2	4B-6.35B	1.2	4B-7B	1.2	4B-8B	0.8
				5B-5B	1.6	5B-6B	1.6	5B-6.35B	1.6	5B-7B	1.6	5B-8B	0.8
						6B-6B	1.9	6B-6.35B	1.9	6B-7B	1.9	6B-8B	0.8
								6.35B-6.35B	1.9	6.35B-7B	1.9	6.35B-8B	0.8
										7B-7B	2.3	7B-8B	0.8
												8B-8B	0.8

How to Place an Order

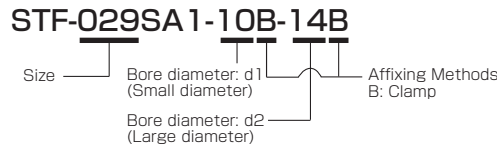

SERIES

- Metal Disc Couplings SERVOFLEX
- High-rigidity Couplings SERVORIGID
- Metal Slit Couplings HELI-CAL
- Metal Coil Spring Couplings BAUMANNFLEX
- Pin Bushing Couplings PARAFLEX
- Link Couplings SCHMIDT
- Dual Rubber Couplings STEPFLEX
- Jaw Couplings MIKI PULLEY STARFLEX
- Jaw Couplings SPRFLEX
- Plastic Bellows Couplings BELLOWFLEX
- Rubber and Plastic Couplings CENTAFLEX

MODELS

STF

STF Models

Items Checked for Design Purposes

Special Items to Take Note of

You should note the following to prevent any problems.


- (1) Always be careful of parallel, angular, and axial misalignment.
- (2) Always tighten bolts with the specified torque.

Precautions for Handling

- (1) Couplings are designed for use within an operating temperature from -20°C to 80°C . Avoid using it under the environment where water, oil, acid, alkali, ozone, chemical agent, etc. are used. Use and storage in direct sunlight may shorten element service life, so cover elements appropriately.
- (2) Do not tighten up clamping bolts until after inserting the mounting shaft.


Mounting

- (1) Check that coupling clamping bolts have been loosened and remove any rust, dust, oil residue, etc. from inner diameter surfaces of the shaft and couplings. In particular, never allow oil or grease containing antifriction or other agent (molybdenum-, silicon-, or fluorine-based), which would dramatically affect the friction coefficient, to contact the surface.
- (2) Be careful when inserting the couplings into the shaft so as not to apply excessive force of compression or tensile force to the element. Be particularly careful not to apply excessive compressing force needlessly when inserting couplings into the paired shaft after attaching the couplings to the motor.
- (3) With two of the clamping bolts loosened, make sure that couplings move gently along the axial and rotational directions. Readjust the centering of the two shafts if the couplings fail to move smoothly enough. This method is recommended as a way to easily check the concentricity of the left and right sides. If unable to use the same method, check the mounting accuracy using machine parts quality control procedures or an alternative method.

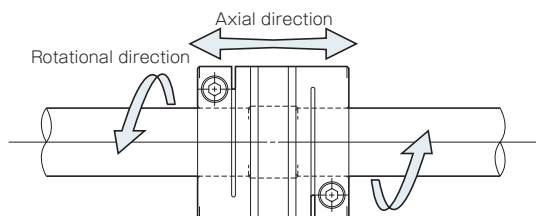


- (4) As a general rule, round shafts are to be used for the paired mounting shaft. If needing to use a shaft with a different shape, be careful not to insert it into any of the locations indicated in the diagrams below. (Do not attempt to face keyed grooves, D-shaped cuts, or other insertions to the grayed areas (■).) Placing the shaft in an undesirable location may cause the couplings to break or lead to a loss in shaft holding power. It is recommended that you use only round shafts to ensure full utilization of the entire range of coupling performance.

Proper mounting examples

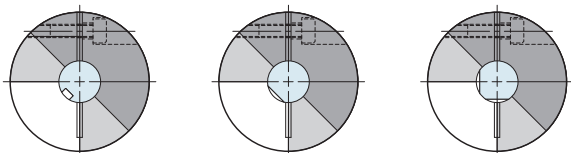


Poor mounting examples

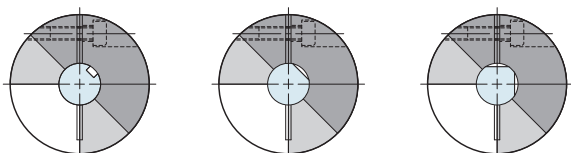

■ : Size: 013, 016 or 019 (φ 8) or 056 (φ 19 or less); ■ : Other

- (5) Insert and mount each shaft far enough in that the paired mounting shaft touches the shaft along the entire length of the clamping hub of the coupling (LF dimension), as shown in the diagram below, and does not interfere with the elements or the other shaft. In addition, restrict the dimension between clamping hub faces (S dimension) within the allowable error range for axial displacement with respect to a reference value. Note that the tolerance values were calculated based on the assumption that both the level of parallel misalignment and angular deflection are zero. Adjust to keep this value as low as possible.

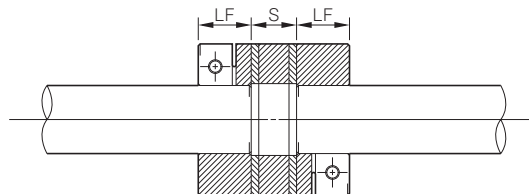

Model	LF [mm]	S [mm]
STF-013SA1	6	6
STF-016SA1	7.5	7
STF-019SA1	9	7
STF-024SA1	9	9
STF-029SA1	10	10
STF-034SA1	12	10
STF-039SA1	15.5	10
STF-044SA1	15.5	17
STF-056SA1	20.5	19

- (6) Check to make sure that no compression or tensile force is being applied along the axial direction before tightening up the two clamping bolts. Use a calibrated torque wrench to tighten the clamping bolts to within the tightening torque range listed below.

Model	Clamping bolts	Tightening torque [N·m]
STF-013SA1	M1.6	0.23 ~ 0.28
STF-016SA1	M2	0.4 ~ 0.5
STF-019SA1	M2	0.4 ~ 0.5
STF-019SA1	M2.5	1.0 ~ 1.1
STF-024SA1	M2.5	1.0 ~ 1.1
STF-029SA1	M2.5	1.0 ~ 1.1
STF-034SA1	M3	1.5 ~ 1.9
STF-039SA1	M4	3.4 ~ 4.1
STF-044SA1	M4	3.4 ~ 4.1
STF-056SA1	M5	7.0 ~ 8.5

* Use M2 bolts on STF-019SA models with holes with a diameter of ø8 mm.

* The start and end numbers for the tightening torque ranges are between the minimum and maximum values. Tighten bolts to a tightening torque within the specified range for the model used.

Suitable Torque Screwdriver

Nominal bolt diameter	Tightening torque [N·m]	Torque screwdriver	Hexagon bit	Coupling size
M1.6	0.23 ~ 0.28	CN30LTDK	CB1.5mm	013
M2	0.4 ~ 0.5	CN60LTDK	SB1.5mm	016,019
M2.5	1.0 ~ 1.1	CN120LTDK	SB2mm	019,024,029
M3	1.5 ~ 1.9	CN200LTDK	SB2.5mm	034
M4	3.4 ~ 4.1	CN500LTDK	SB3mm	039,044
M5	7.0 ~ 8.5	N10LTDK	SB4mm	056

Clamping Bolts

Use Miki Pulley-specified clamping bolts because they are processed with solid lubrication films (except for STF-013SA1 M1.6). Applying adhesives to prevent loosening, oil, or the like to a clamping bolt will alter torque coefficients due to those lubricating components, creating excessive axial forces and potentially damaging the clamping bolt or coupling. Be particularly careful to never use liquid anaerobic screw fixatives, as they have adverse effects on the rubber body.